


USE AND MAINTENANCE MANUAL

SLASHER WITH HORIZONTAL AXLE TYPE "FLIPPER"

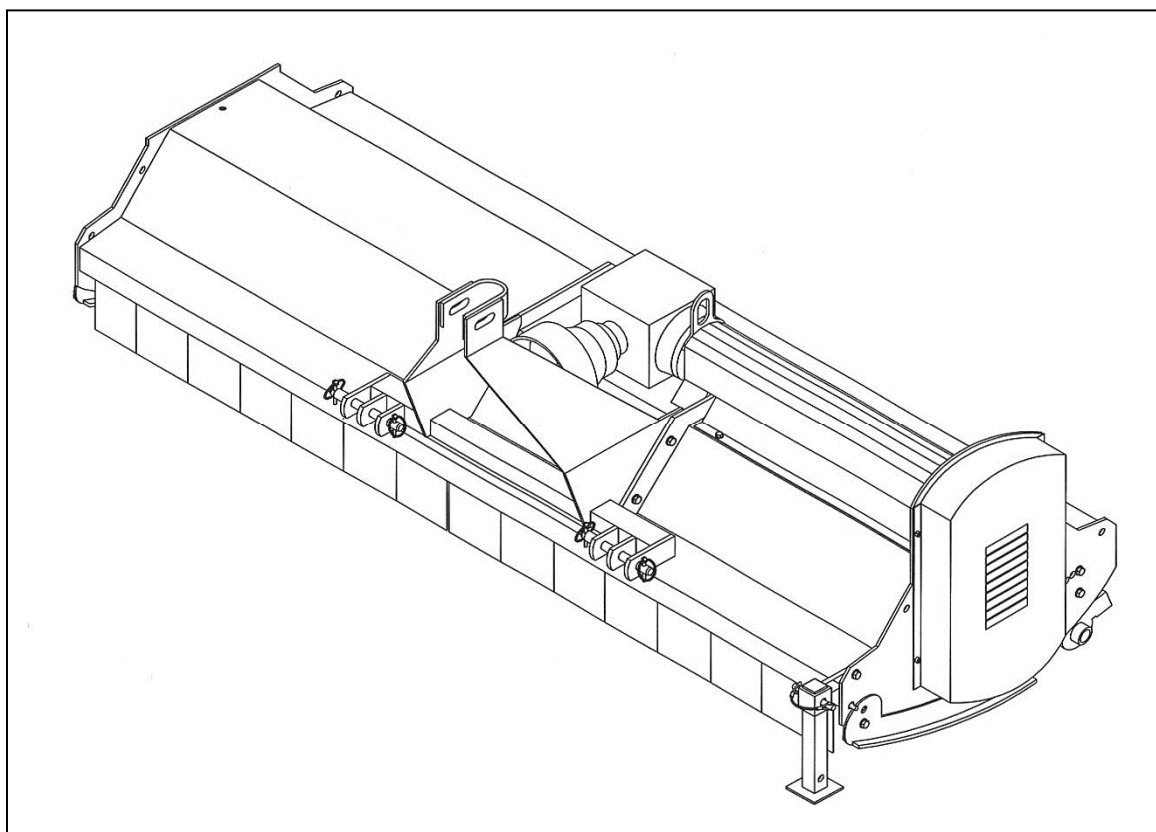

PREFACE

This manual is an integral part of the machine.

It must always accompany the machine and be kept within reach of the operator.
The enclosures mentioned are an integral part of this manual.

The purpose of this manual.

This manual gives information for the correct and safe use of the machine.
The owner must read this manual carefully before work with the machine.

Responsibility of the owner

The owner is responsible for accidents or damages caused to people or things due to negligence in following the instructions in this manual.

Assistance in using this manual

Explanations: contact the dealer.

Request for additional copies of the manual: in case of loss or wear and tear, or in case one wants the manual in a different language, the customer should ask the dealer or manufacturer.

Pay attention to the warning signals



<Danger>: indicates a situation that is potentially dangerous which, if not avoided, will cause death or serious damage.



<Warning>: indicates a situation that is potentially dangerous which, if not avoided, will cause death or serious damage.



<Caution>: indicates a situation that is potentially dangerous which, if not avoided, can cause minor to moderate damage, or it indicates to be careful about an unsafe procedure.

<Important> : indicates instructions that must be followed precisely in order to avoid damage to the product, process or environment.

<Note>: indicates supplementary information.

DESCRIPTION

FUNCTION OF USE

The machine, thanks to the reversible three point hitch and to the pass through gear box is reversible, and according to the different tools can makes different functions like cut grass, cut up poles exc.

The use of a technical constructive concept trended to the search of high performances, reduction of troubles and durability, improves the power/consumption ratio of the tractor thanks to the elasticity of the machine frame, to the tools shape, to the perfect rotor balancing and to many original technical solutions.

PERFORMANCES

The machine is connected to the tractor with a three points hitch that gives the motion of translation and with a PTO shaft connected with the tractor PTO that gives the motion of rotation to the hoes shaft.

The working width is fix and it's determined from the choice of the machine type.

The working depth is adjustable.

The working zone can be centered or moved in comparison with tractor axis using the different positions of the lower hitches.

The rear roll adjusts the cutting height and provides to tread the cut material.

PERFORMANCES LIMIT

- ❑ Speeds greater than the maximum can compromise the condition of the machine, the quality of the work and the safety of the operator.
- ❑ Maximum power applicable to the gear box: from 9 to 38 Kw \pm 5% with 540 or 1000 r.p.m. Superior power to which is indicated can damage irreparably the transmission gear box; especially during heavy works.

STANDARD EQUIPMENTS

- **Standard PTO shaft.**
- **Free wheel device inside gear box.**
- **Reversible third point hitch.**
- **10 positions adjustable rear roll.**
- **Adjustable slides.**

VARIANT & OPTIONS

- **Spatula tools.**
- **Blade tools.**
- **Hammer tools.**
- **Hydraulic shifting.**
- **Mechanical shifting.**

TECHNICAL SPECIFICATIONS

CHARACTERISTICS PER MODEL

Model	Type	Version	Power		Working width		Weight		Dimensions A x B x H	N° tools	Rotor R.P.M.
			Hp	Kw	cm	Inch	kg	lbs.	Cm / Inch	n°	R.P.M.
FLIPPER	80	S	12-18	9-13	80	32	157	346	94x82x72 38x32x28	12	2410
	106	S	18-22	13-16	106	42	180	397	120x82x72 48x32x28	16	2410
	132	S	22-30	16-22	132	52	232	420	146x82x78 58x32x31	20	2410
	158	S	30-40	22-34	158	62	255	511	172x82x78 68x32x31	24	2410
	186	S	40-50	34-38	186	72	285	628	198x82x78 78x32x31	28	2410
	214	S	40-50	34-38	204	82	368	811	224x82x78 88x32x31	32	2410
FLIPPER	80	C	12-18	9-13	80	32	157	346	94x82x72 38x32x28	24	2410
	106	C	18-22	13-16	106	42	180	397	120x82x72 47x32x28	32	2410
	132	C	22-30	16-22	132	52	232	420	146x82x78 57x32x31	40	2410
	158	C	30-40	22-34	158	62	255	511	172x82x78 68x32x31	48	2410
	186	C	40-50	34-38	186	72	285	628	198x82x78 78x32x31	56	2410
	214	C	40-50	34-38	204	82	368	811	224x82x78 88x32x31	64	2410
FLIPPER	80	M	12-18	9-13	80	32	157	346	94x82x72 38x32x28	12	2410
	106	M	18-22	13-16	106	42	180	397	120x82x72 47x32x28	16	2410
	132	M	22-30	16-22	132	52	232	420	146x82x78 57x32x31	20	2410
	158	M	30-40	22-34	158	62	255	511	172x82x78 68x32x31	24	2410
	186	M	40-50	34-38	186	72	285	628	198x82x78 78x32x31	28	2410
	214	M	40-50	34-38	204	82	368	811	224x82x78 88x32x31	32	2410

Version:

S = Spatula
C = Blade
M = Hammer

SAFETY INFORMATION

PRESCRIZIONI GENERALI

- ❑ Only work in daylight.
- ❑ To prevent damage due to lunch of objects or parts of blades, before to start job be sure that any persons or animals should be in the radius of 50 meters from the machine.
- ❑ Wear long pants and heavy shoes.
- ❑ The protections are integral part of the machine: always work with the protections.
- ❑ Pay attention to the soil: make sure that are not stones, sticks, iron wires, etc...
- ❑ Pay attention using the machine on slopes: proceed to the maximum slope and never work in slanting direction.
- ❑ Before leaving the driver's seat, turn off the engine and disengage the transmission engine-shaft.
- ❑ Check immediately the machine if it touches foreign objects.
- ❑ Check immediately the machine if there are unusual strong vibrations.
- ❑ Change quickly defective parts.

❑ CAUTION – WARNING :

Gear box has inside a free wheel device, after P.T.O. disconnection rotor turns for at least 30 seconds, before approach the tools be sure that the rotor is stopped.

❑ WARNING :

To prevent damage to the PTO shaft and to the gear box, don't start the machine roughly.

SAFETY RESTRICTIONS


Children and people who are not familiar with these instructions must not be permitted to use the machine. Local regulations can restrict the use of the machine in accordance to the age.

RUNNING IN

A new machine needs a running in. At the first use connect the machine to the tractor, connect the PTO shaft, pull down the machine at 15 centimeter from ground then start the P.T.O. and gradually bring it to 540 r.p.m... Run the machine for about 15 minutes. A whistle in the supports zone it is normal and it's due to the arrangement of the support protection, it will disappear in a few times.

SAFETY SIGNS ON THE MACHINE

In this section, the safety signs on the machine are reproduced and explained.

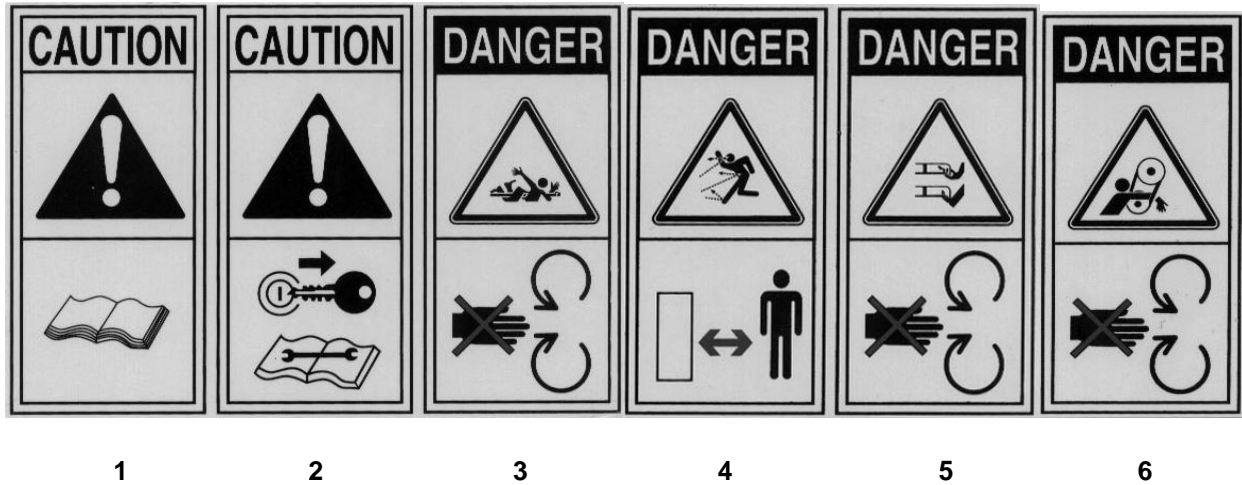

1. Read the operator manual.
2. Disconnect the tractor key before maintenance and repair operations.
3. Stay at safety distance from blades when machine is moving.
1. Danger of flying objects. Stay at safety distance.
4. Stay at safety distance from blades when machine is moving.
5. Stay at safety distance from blades when machine is moving.

The safety signs on the machine must always be legible.

In case of damage, the labels of the signs must be substituted.

In the case of the substitution of machine parts that have safety signs, the signs must be replaced.

Supplying of new safety labels and the application procedure

Contact your dealer to receive new safety labels with instructions for application.

INSTRUCTIONS FOR USE


1. BEFORE BEGINNING WORK

a) Adjust the slides as follow :

1. Unscrew the screws "B" then take out them.
2. Set the position of the slide "A".
3. Insert the screws "B" in place then lock them.
4. Repeat the same operations on the other side of the machine, be sure that both slides are adjusted in the same way.

b) Adjust the cutting height as follow :

1. Unlock the screw "D".
2. Unscrew the screw "E" then take out it.
3. Repeat the same operations on the other side of the machine.
4. Set the position of the roll "C". Moving the roll forward in comparison with vertical position, cutting height decrease and grass move over the roll, moving backward cutting height increase and grass move under the roll.
5. Insert then lock the screws "E", lock the screws "D".
6. If it's necessary to increase more the cutting height, unscrew and take out the screws "D" and "E" on both sides of the machine, move the two roll brackets in the lower position then insert the two screws "D".
7. Repeat the points "4" e "5".

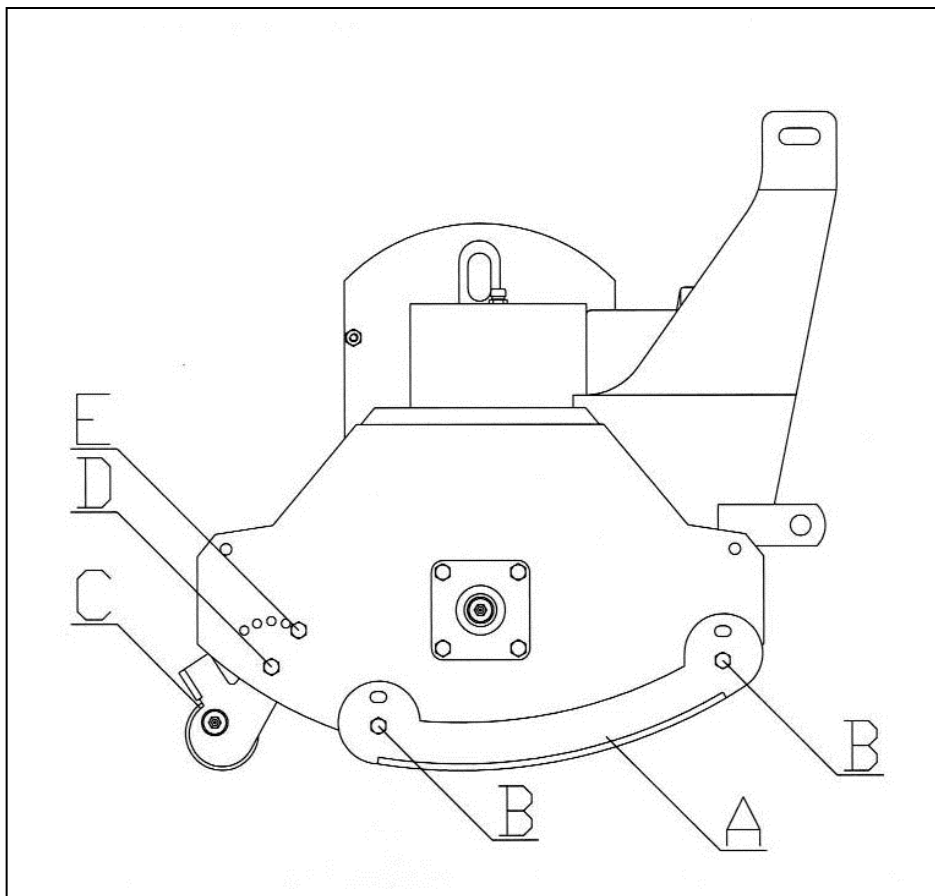

- c) Hook the machine to the tractor, operate as follows :
 - 1. Remove the safety pins then take out the pins from the two lower connection points of the machine.
 - 2. Plug in the raising tractor beams into the lower hitch points of the machine, plug in the pins, and lock with the safety pins.
 - 3. Connect through tie-rod the third hitch point of the tractor with the third point of the machine (the connection triangle vertex), insert the pin and lock with safety pin.
- d) With the machine raised, go to work area.
- e) Connect the tractor PTO with machine PTO.
- f) Check that PTO chain is locked to prevent the protection sheet of PTO rotating.

2. TO BEGINNING WORK

- a) Keep people and animals at least 65 feet radius all around the machine.
- b) Pull down the machine until the hoes touch the ground.
- c) Connect PTO power and gradually bring it to 540 r.p.m..
- d) Pull down completely the machine and start to work.

3. AT THE END OF CUTTING OPERATION

- a) Stop the tractor and wait at least 30 seconds that the rotor is completely stopped.
- b) Raise the machine until the hoes goes out from ground.
- c) Disconnect PTO power.
- d) Disconnect tractor PTO from machine PTO.
- e) Raise completely the machine.

MAINTENANCE INSTRUCTIONS

On diagram "A" the maintenances are indicated with their terms to effect on the machine.
 Not follow the scheduled terms can compromise the functionality of the machine and in this case the warranty is not applicable.

DIAGRAM "A" SCHEDULED MAINTENANCE

	FIRST START	AFTER 10 H.	EACH 30 H.	EACH 500 H.	END SEASON	START WORK	END WORK
MACHINE	Greasing		Greasing		Cleaning Greasing		Cleaning
GEAR BOX	Oil level	Oil level	Oil level	Change oil			
SCREW		Screw	Screw				
TOOLS			Check		Check	Check	Check
BELTS		Check		Replacement			

1. GREASING

At the scheduled time on diagram "A", grease points "B" "C", "D", "E", "F", "G".

Greasing point is equipped with greaser HYDRAULIC TYPE MODEL "A" UNI 7663.

To greasing use only MULTIFUNCTIONAL GREASE LITHIUM BASED Type NLGI 2.

2. OIL CHECK - OIL REPLACEMENT IN GEAR BOX

At the scheduled time on diagram "A", check or replace oil into gear box.

To fill oil use only OIL SAE 140 EP.



Gear box capacity: 0,8 L

a) To check oil level into the gear box, operate as follow :

1. With the machine on level, remove the safety plastic cover from the front side of the gear box, unscrew plug "TL" and check that oil touches on lower hole rim.
2. If the level is ok, screw plug "TL".
3. If the level is low, unscrew plug "TR" and refill.
4. When the level is ok, screw plug "TL" and "TR".

b) To change oil into the gear box, operate as follow :


1. Remove the safety plastic cover from the front side of the gear box, unscrew plugs "TL", "TR" and the discharge plug "TS", wait until all oil has exited.
2. Screw the discharge plug "TS" then fill oil from plug "TR".
3. When level is ok, screw plugs "TL" and "TR" and assemble the safety plastic cover.

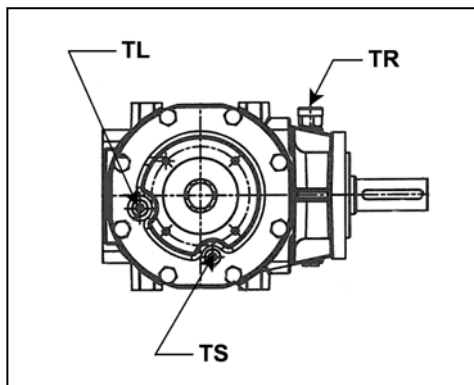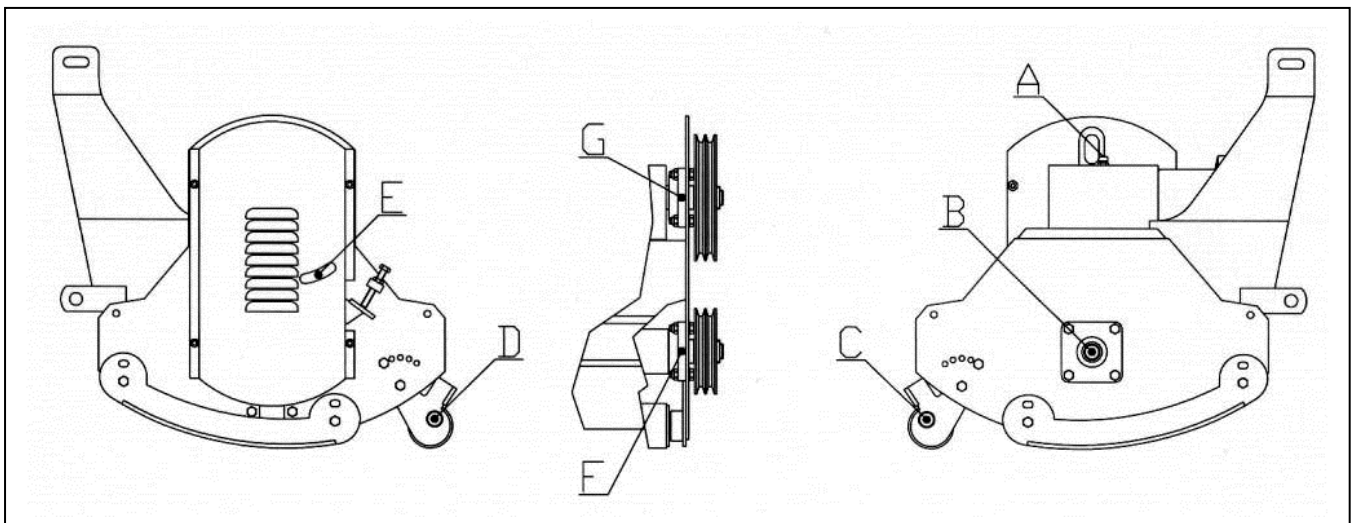

3. TOOLS REPLACEMENT

a) To change tools, operate as follow :

1. Unscrew the nut then take out the screw "B".
2. Take out tools "A" with bush and spacers.
3. If tool is a hammer or a spatula there are not bushes.
4. Assemble the new tool.
5. Fit the screw "B" then screw the nut.
6. **ATTENTION: all tools must be of the same type.**
7. **ATTENTION: changing type of tools you must balance again the rotor.**

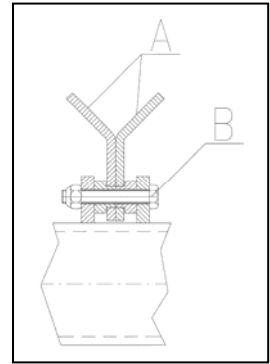


4. BELTS ADJUSTING AND REPLACEMENT

a) To adjust the tension of the transmission belts, operate as follow :

1. Disassemble safety protection "C" unscrewing the four screws "D".
2. Unscrew the lock nut "B", screw the screw "A" to increase or unscrew to decrease the tension.
3. After operation screw the lock nut "B" then assemble the safety protection "C".

b) To change the transmission belts, operate as follow :

1. Disassemble safety protection "C" unscrewing the four screws "D".
2. Unscrew the lock nut "B" then full unscrew the screw "A"
3. Remove the old belts "E", to prevent adjusting problems you must replace both, then assemble the new referring to the characteristics in the SPARE PART LIST.
4. Make operations "2" and "3" point "a".

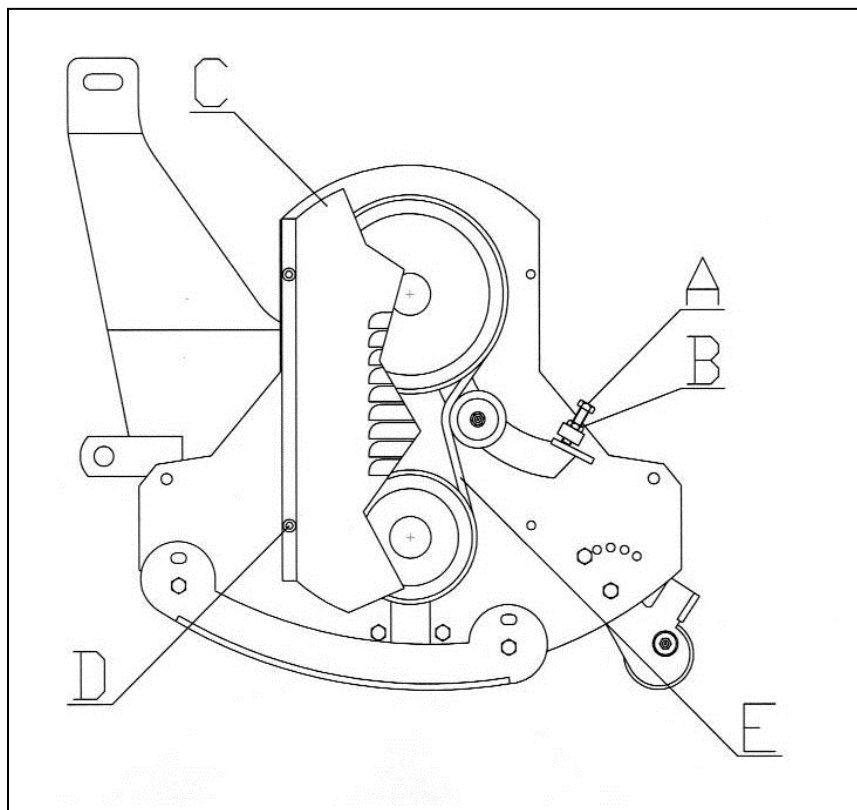

PROBLEMS SOLVING

TROUBLES	GROUPS AND SOLUTIONS
Abnormal vibrations	<ul style="list-style-type: none">-Not balanced rotor – Enquire a dealer.-Loss of one or more tools – Replace.-Damaged bearings – Replace.
Uneven or unsatisfactory cut	<ul style="list-style-type: none">-Damaged tools – Replace.-Tools choice not good – Change with another type.

TRANSPORT

Except when working, moving the machine takes place when the machine is standing still and the transmission is disconnected.

<Important>: keep speed low avoiding holes and ground roughness.

<Important>: Before begin the movements always make sure that the safety hooks be in position.

<Note when on the road, obey existing traffic laws. Exhibit the signal signs on the rear ends. Respect any local laws there may be.

STORAGE

Store the machine in a dry place that isn't dusty.

INFORMATION ON DEMOLITION



At the end of its working life, the machine must be sent to be demolished and that can only be done by an authorized authority, in accordance with the national laws in force for the environment. Therefore it is necessary to get information from the qualified local authorities on the procedure to follow. The machine is mainly composed of: iron materials and paints.

WARRANTY

The machine is covered by the manufacturer warranty for a period of 24 months.

The warranty is not applicable when:


- a) The maintenance work has not been done correctly.
- b) The machine has been used out of its own service.
- c) The machine has been transformed or modified without the manufacturer's written authorization.


WORK AND MAINTENANCE SHEET


Every user should register on this sheet the facts about the life of the machine (both work and maintenance), so as to attest its conditions.


[illegible]



SPARE PARTS & OPTIONS


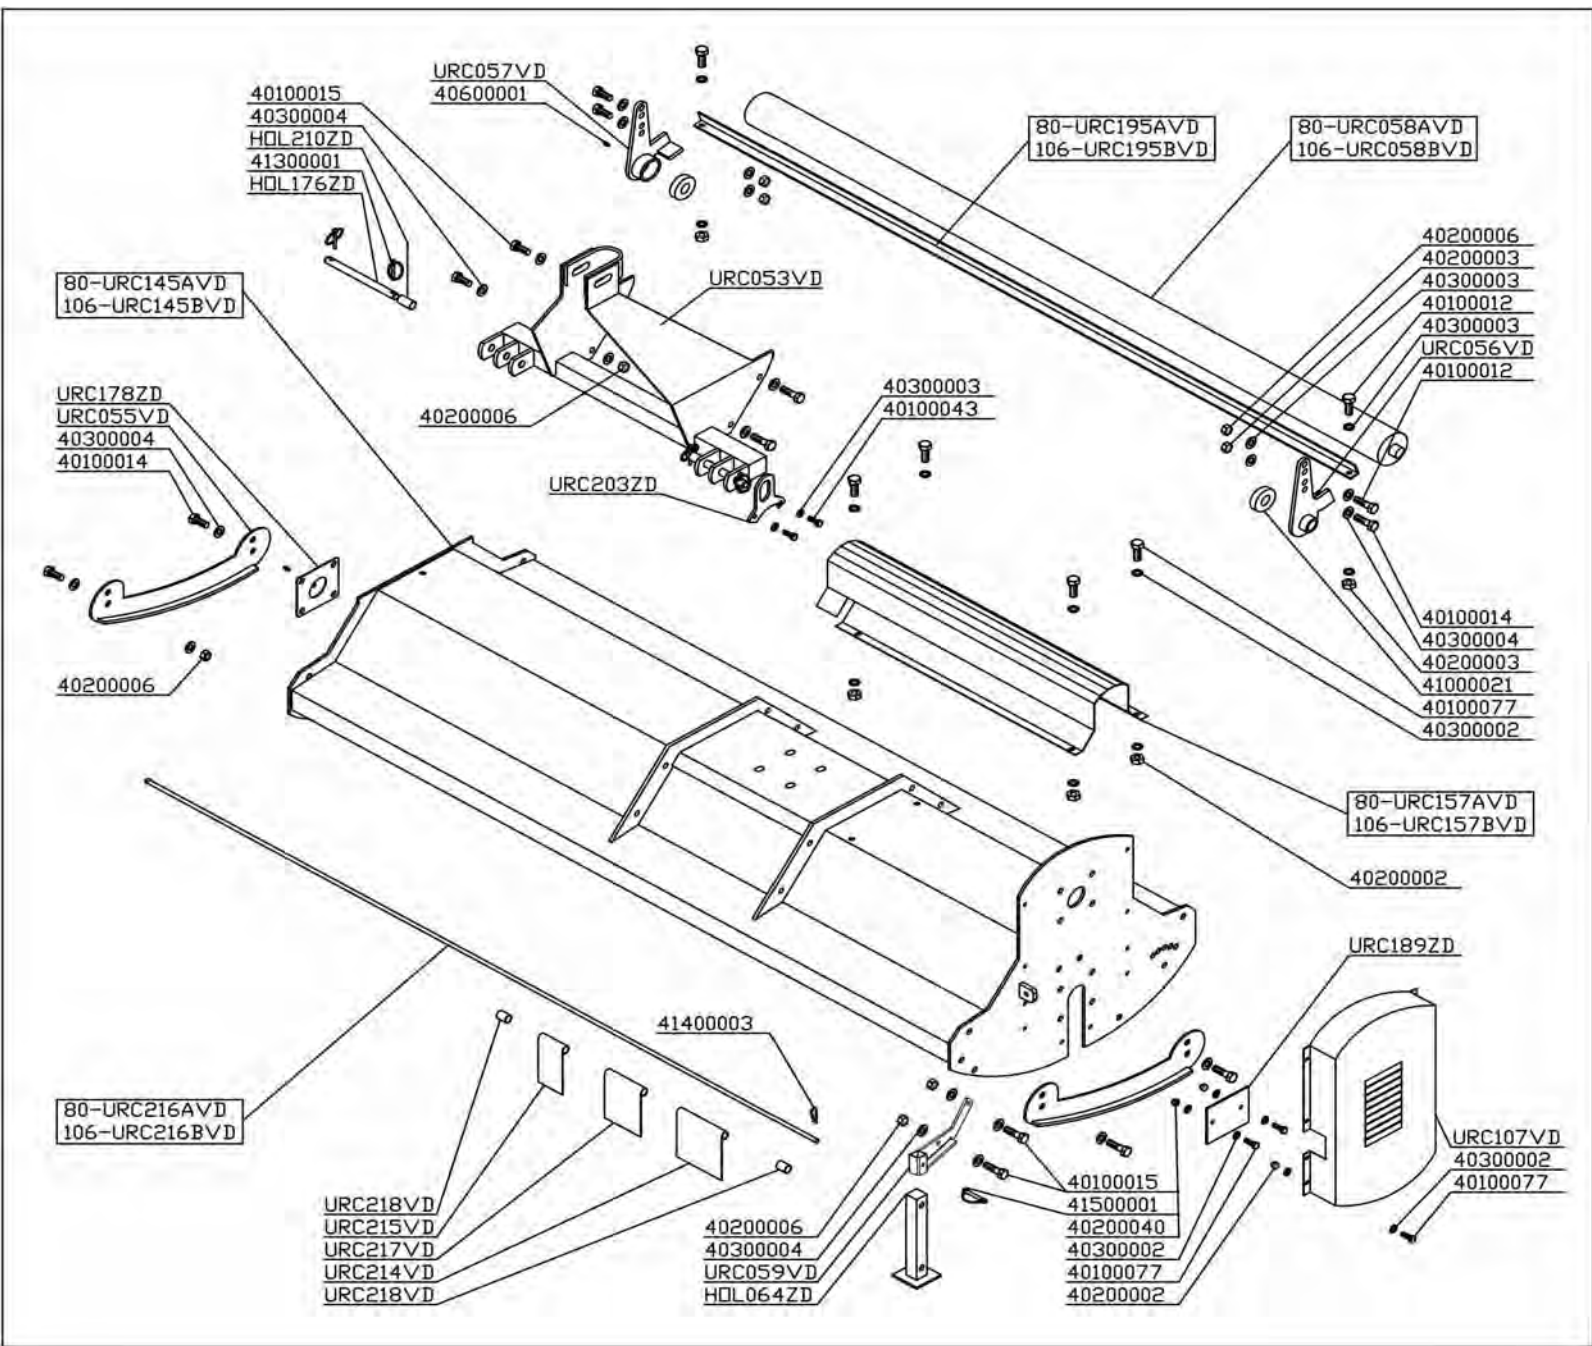


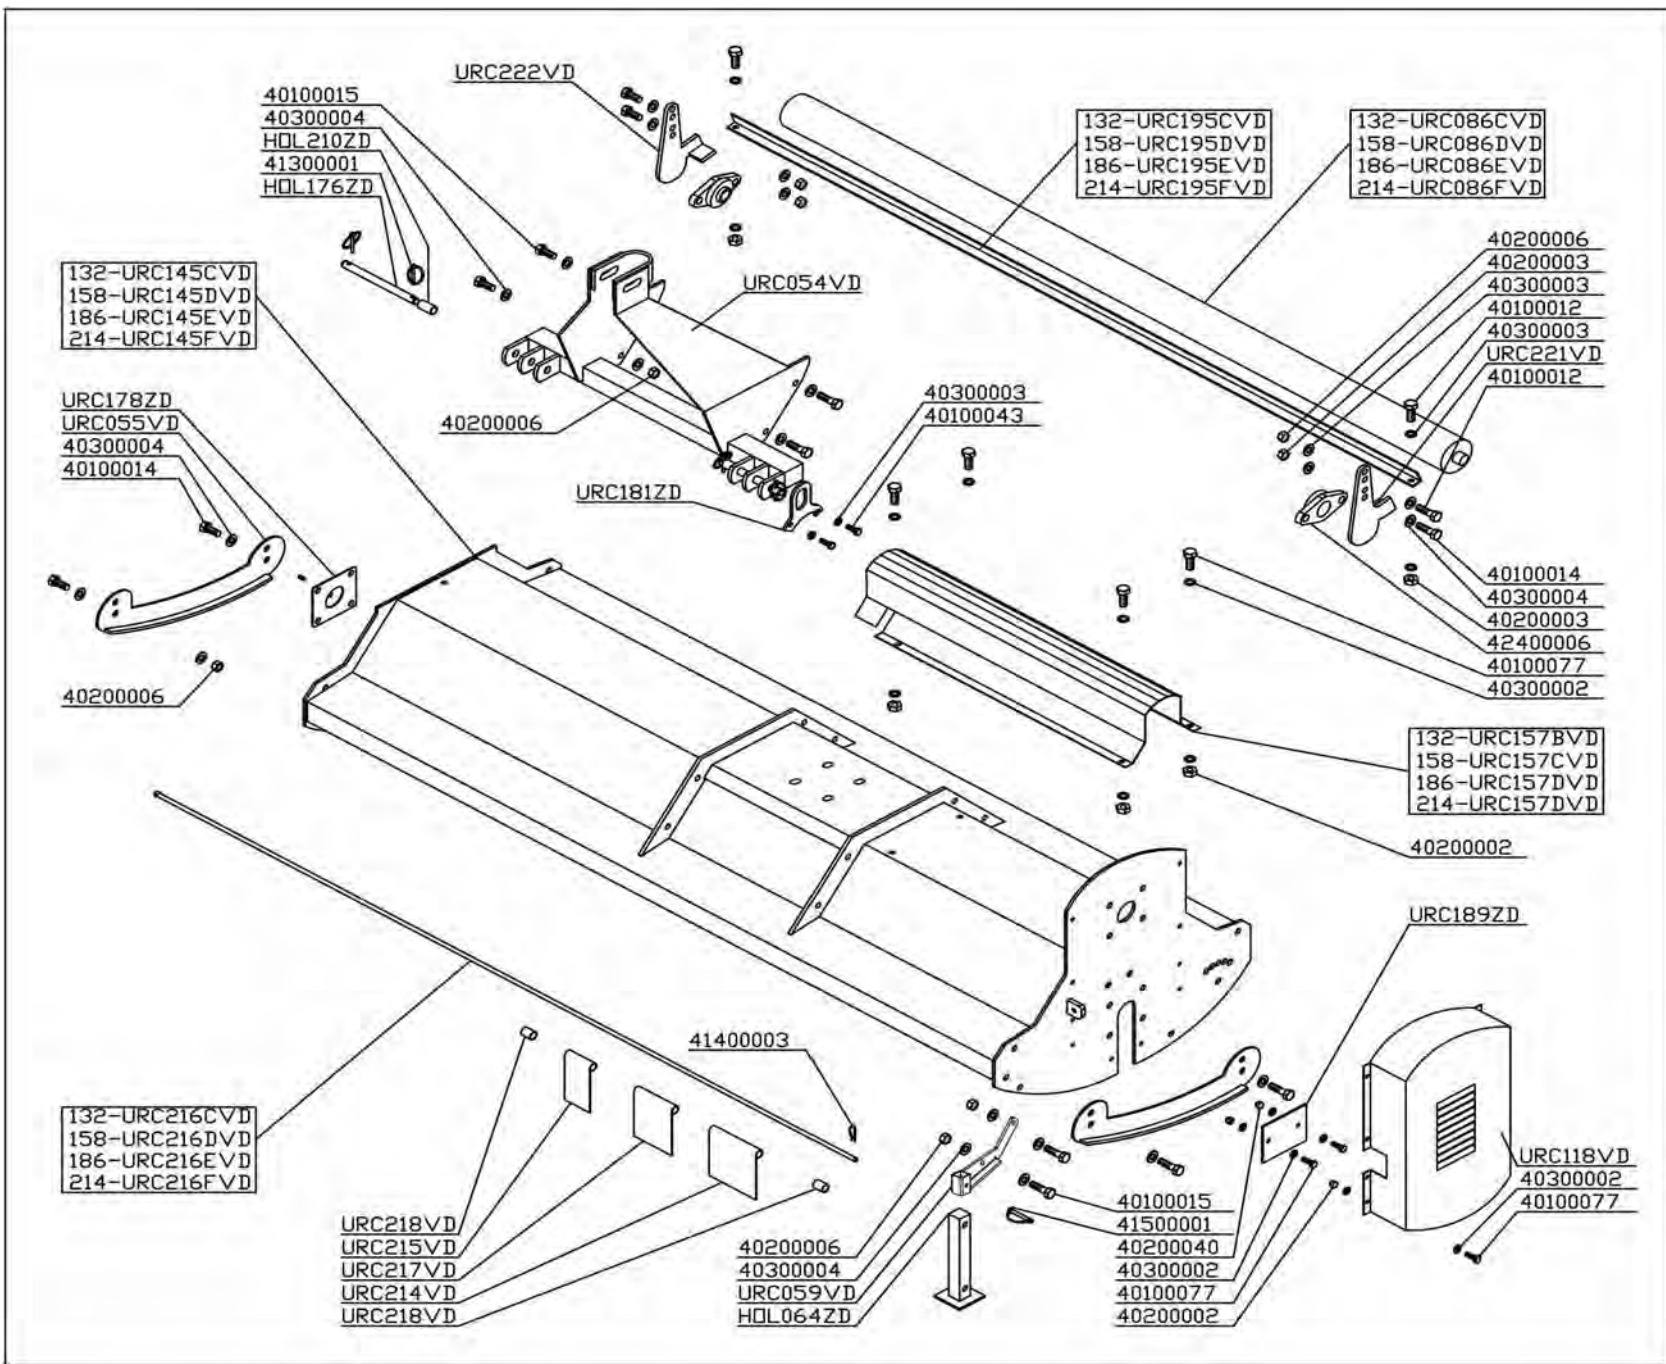

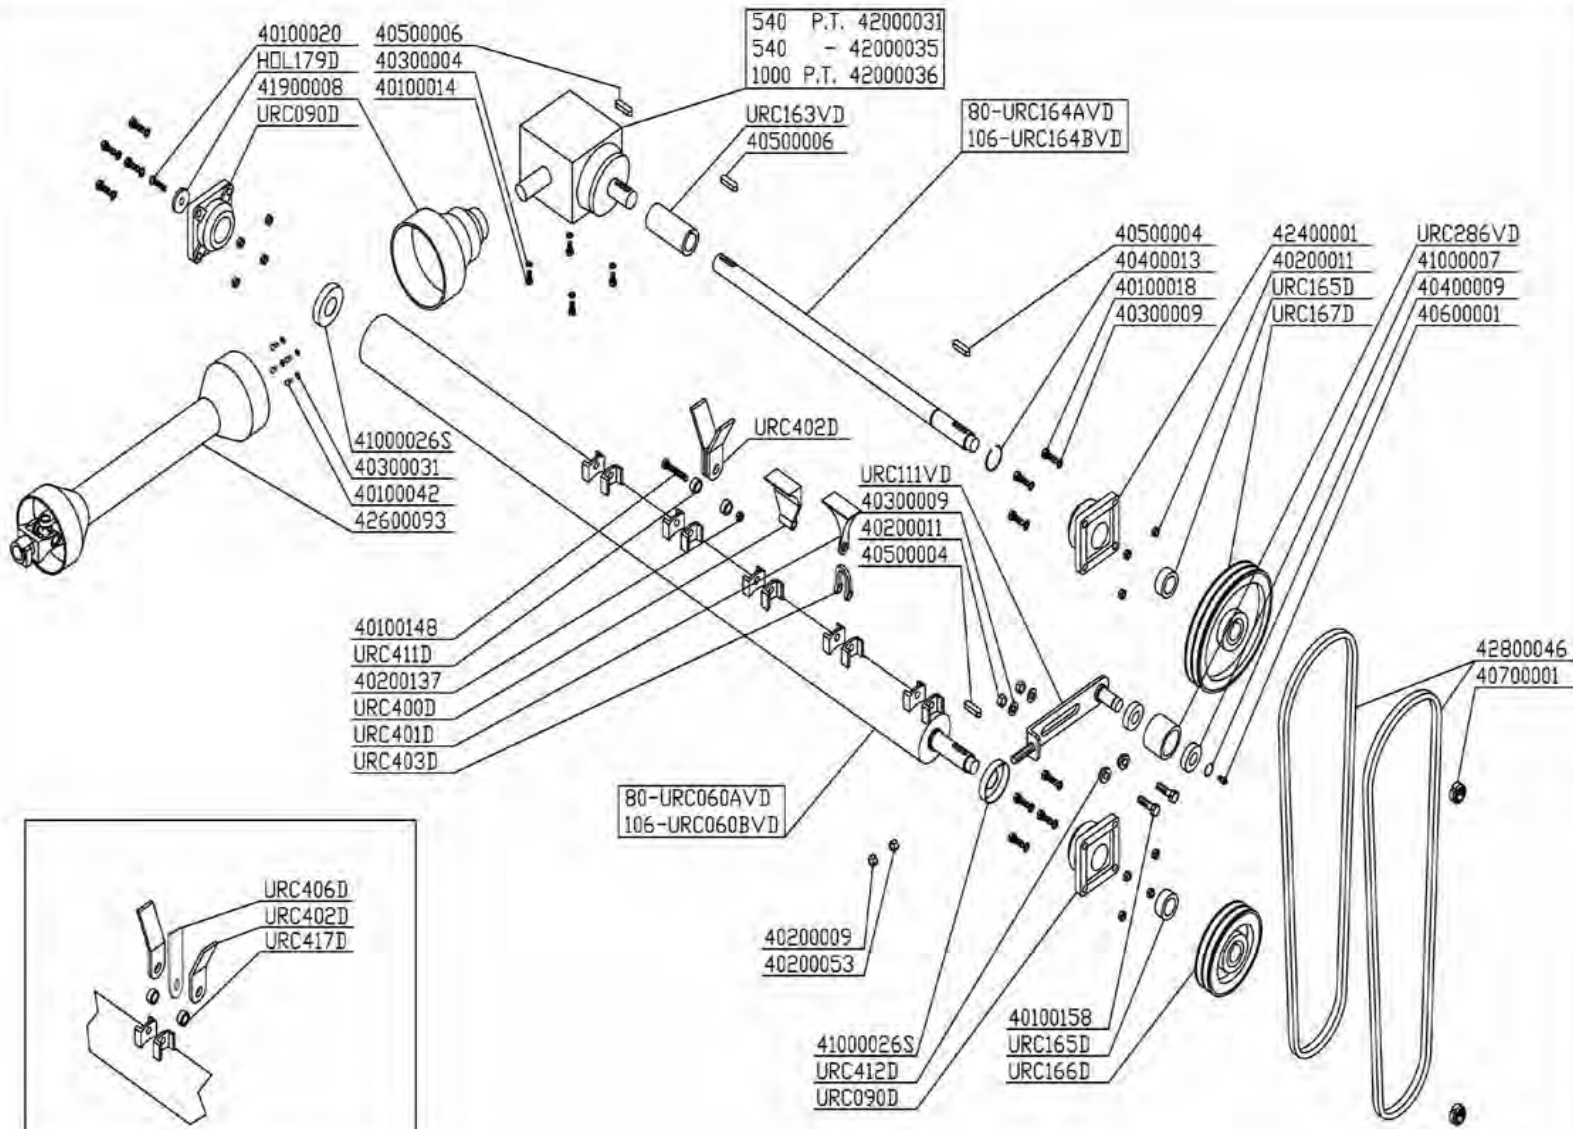

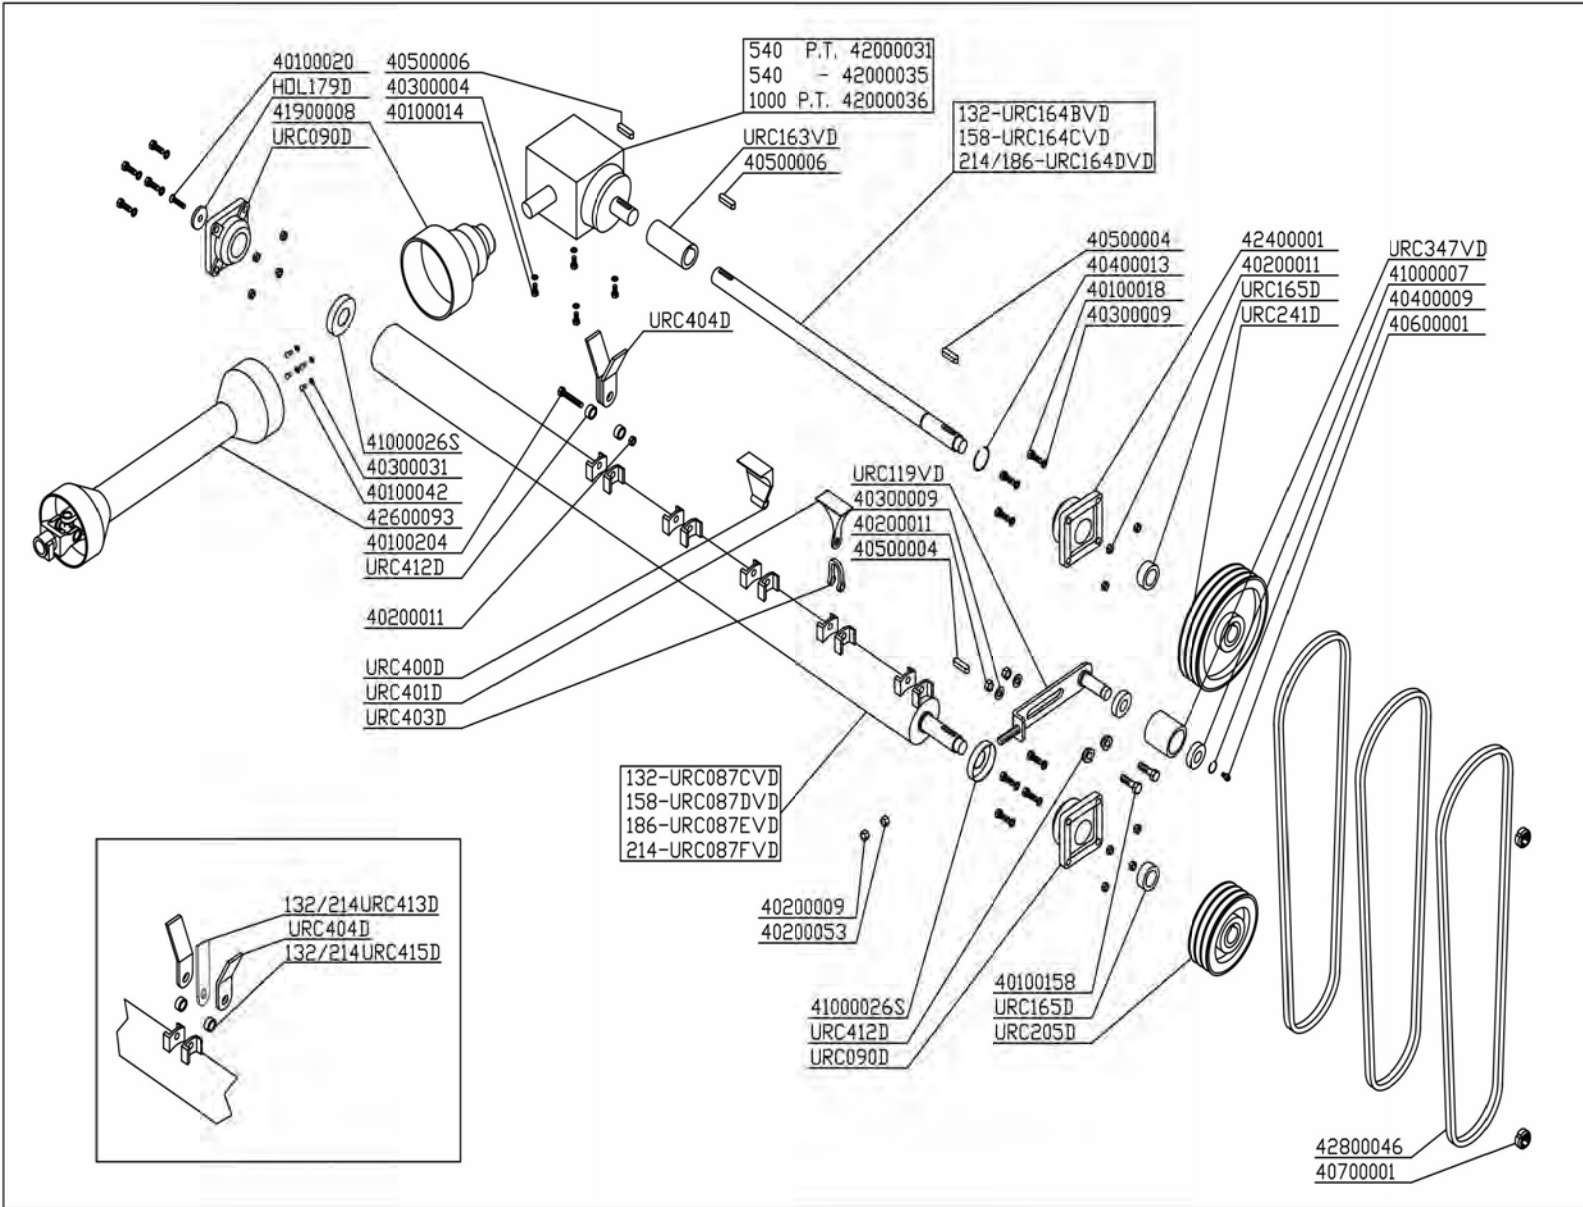

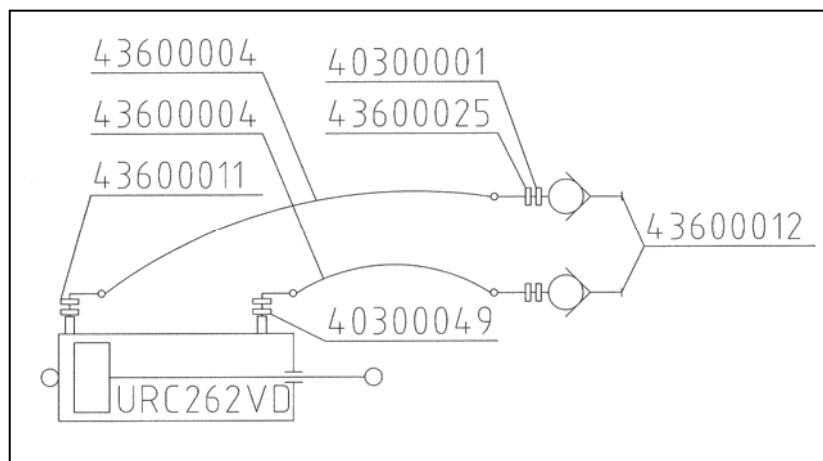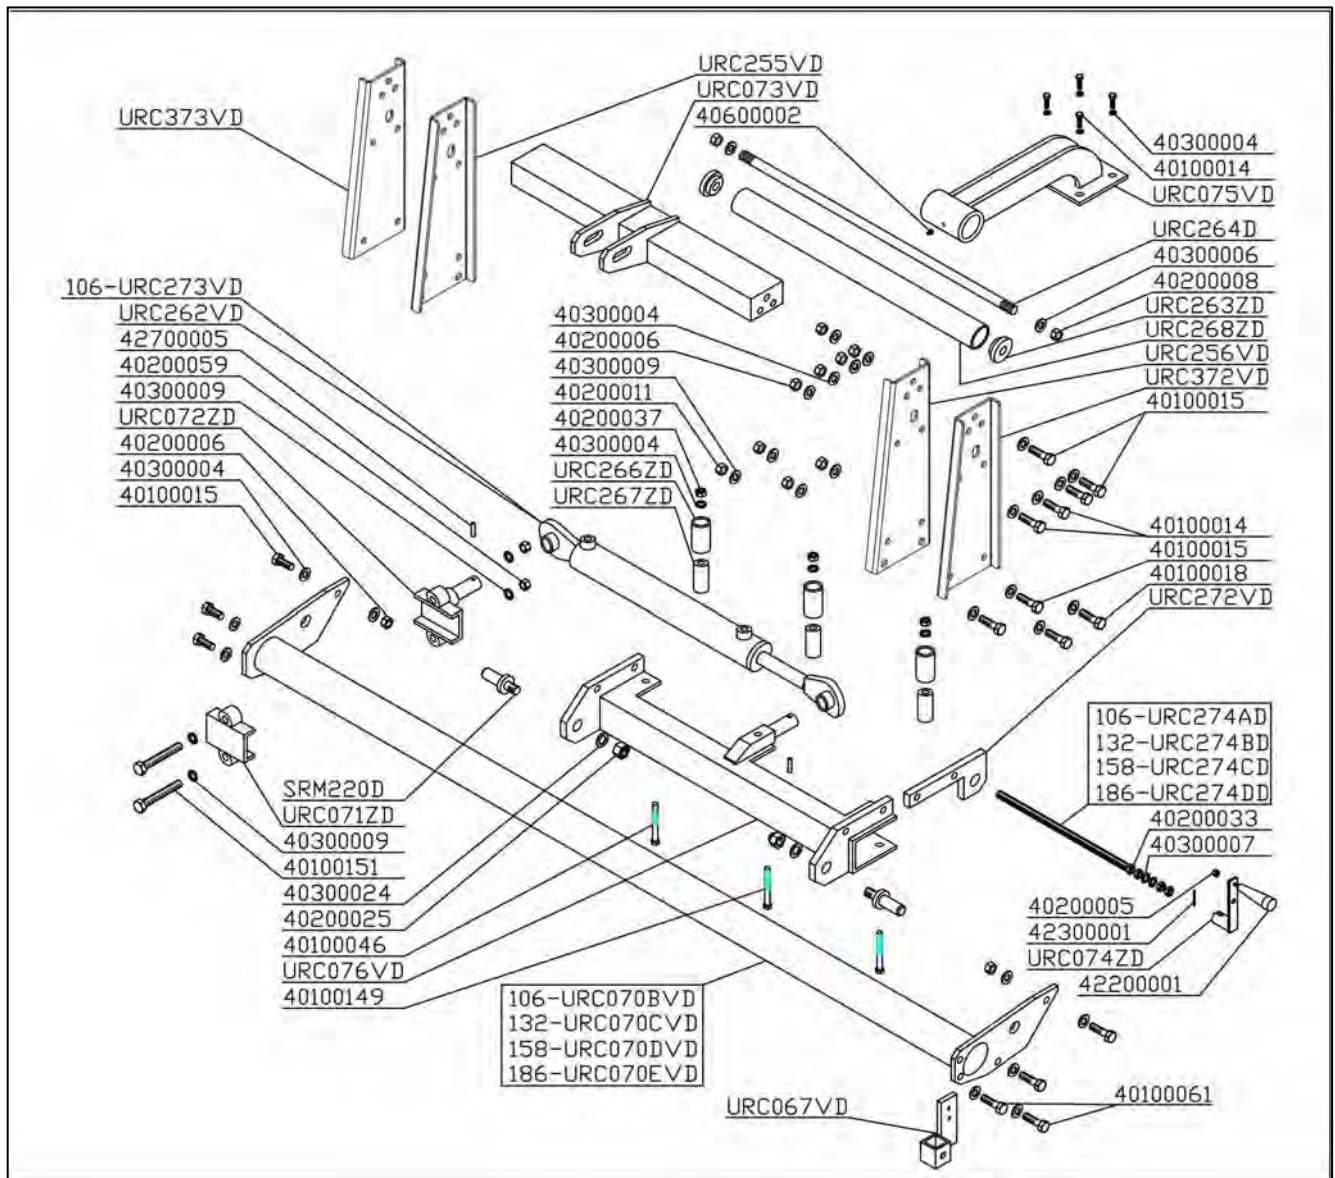

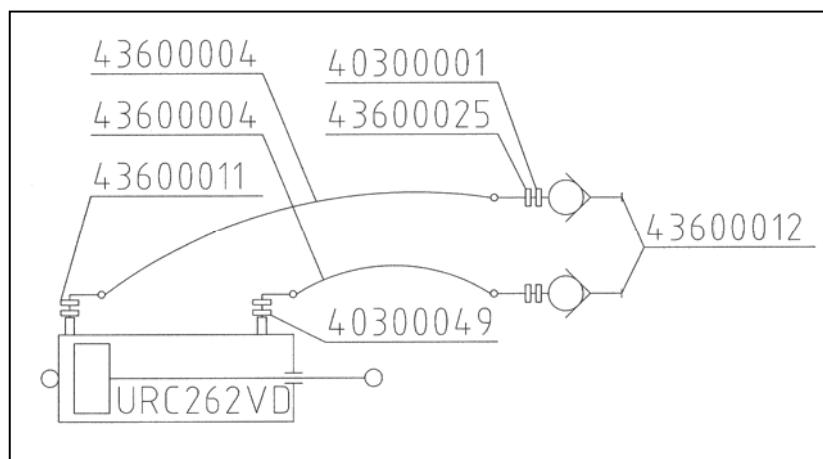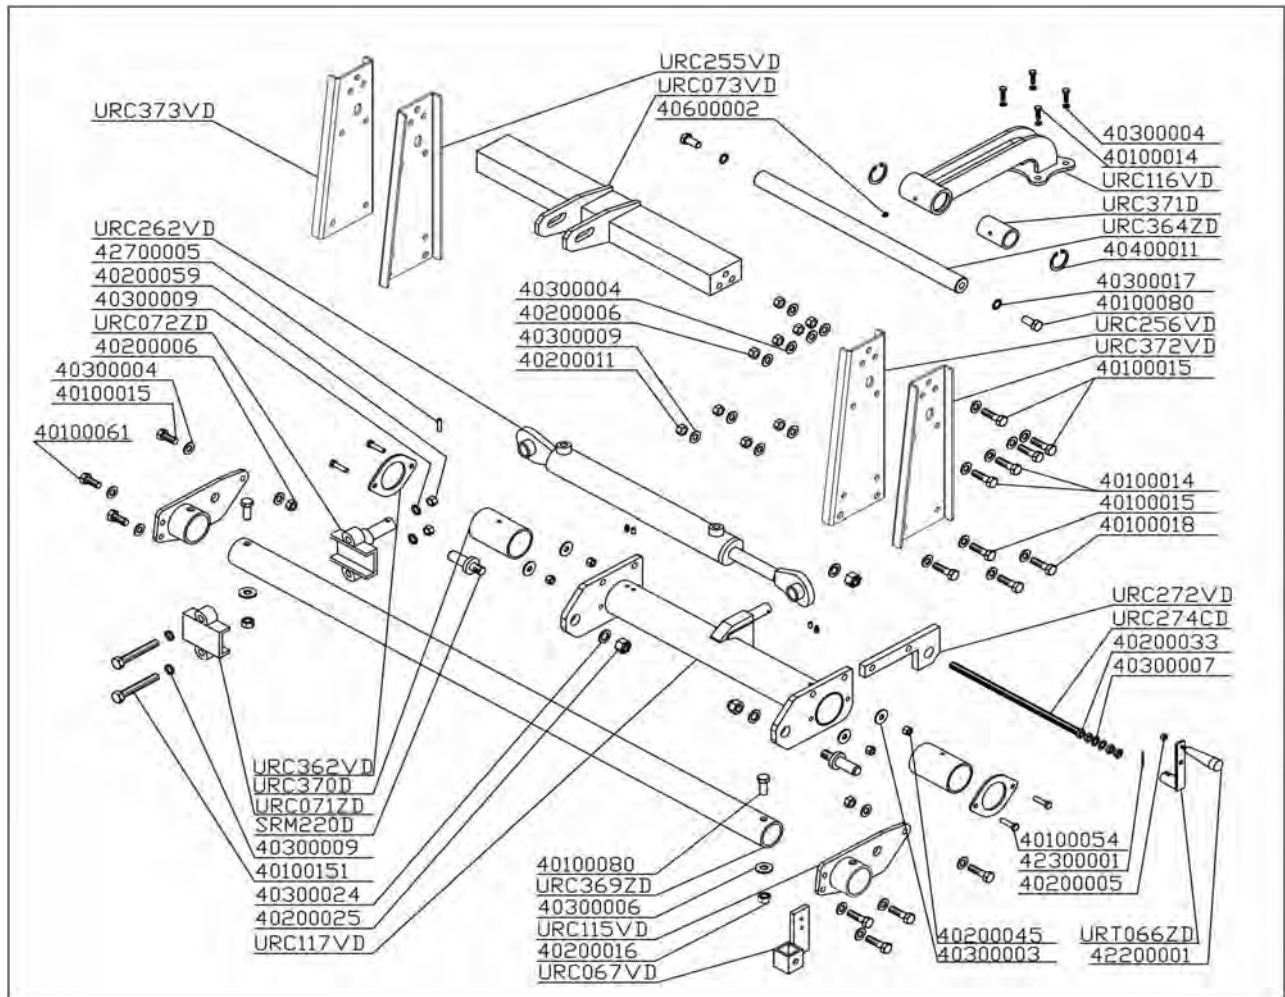

INDEX

PREFACE	2
DESCRIPTION	3
FUNCTION OF USE	3
PERFORMANCES	3
PERFORMANCES LIMIT	3
STANDARD EQUIPMENTS	3
VARIANT & OPTIONS	3
TECHNICAL SPECIFICATIONS.....	4
SAFETY INFORMATIONS	5
PRESCRIZIONI GENERALI.....	5
SAFETY RESTRICTIONS.....	5
RUNNING IN	5
SAFETY SIGNS ON THE MACHINE	6
INSTRUCTIONS FOR USE	7
1. BEFORE BEGINNING WORK	7
2. TO BEGINNING WORK	8
3. AT THE END OF CUTTING OPERATION	8
MAINTENANCE INSTRUCTIONS.....	9
DIAGRAM "A" SCHEDULED MAINTENANCE	9
1. GREASING	10
2. OIL CHECK - OIL REPLACEMENT IN GEAR BOX	10
3. TOOLS REPLACEMENT	11
4. BELTS ADJUSTING AND REPLACEMENT	11
PROBLEMS SOLVING	12
TRANSPORT	13
STORAGE	13
INFORMATION ON DEMOLITION	13
WARRANTY	13
WORK AND MAINTENANCE SHEET	14
SHEETS 80-106	16
SHEETS 132-158-186-214	17
MECHANISMS 80-106.....	18
MECHANISMS 132-158-186-214.....	19
OPTION HYDRAULIC AND MECHANIC SHIFTING 106-132-158-186.....	20
HYDRAULIC AND MECHANIC SHIFTING 214.....	22



Dichiarazione CE di conformità ai sensi della Direttiva Macchine 2006/42/CE
CE declaration of conformity under the Machinery Directive 2006/42/CE
Déclaration CE de conformité conforme a la Directive Machine 2006/42/CE
Eg konformitätserklärung im Sinne der Eg Vorschrift Maschine 2006/42/CE

D E L M O R I N O S. R. L."

- Via Caroni di Sotto n. 19 -

- 52033 CAPRESE MICHELANGELO (AREZZO) ITALIA.

Dichiara sotto la propria responsabilità che la macchina "TRINCIA" è conforme ai requisiti di sicurezza e di tutela della salute di cui alla "Direttiva Macchine 2006/42/CE."

Per la verifica delle conformità alla direttiva sopramenzionata sono state consultate le norme armonizzate **UNI EN ISO 12100:2010; 13857:2008; 4524-1:2010; 4254-12:2010.**

Under its own responsibility declare that the machine "FLAIL MOWER" complies to the safety and health protection requirement of machinery directive **2006/42/CE.**

To verify the conformity to the above mentioned directive, have been consulted the harmonized standards **UNI EN ISO 12100:2010; 13857:2008; 4524-1:2010; 4254-12:2010.**

Déclarons sous notre responsabilité que la machine "BROYEUR" est conforme aux prescriptions en matière de sécurité et de santé stipulée dans la directive machine **2006/42/CE.**

Pour le contrôle des conformités des directive citées ont été consultées les règles unifiées **UNI EN ISO 12100:2010; 13857:2008; 4524-1:2010; 4254-12:2010.**

Erklärt hiermit in eigener Verantwortung dass der maschine "HÄCKSELMASCHINE" Die Schutzanforderungen und den Gesundheitsschutz, gemäß der **2006/42/CE** einhält.

Für Überprüfung der Konformität der oben genannten Vorschriften wurden Vorschriften konsultiert **UNI EN ISO 12100:2010; 13857:2008; 4524-1:2010; 4254-12:2010.**

TRINCIA - FLAIL MOWER - BROYEUR - HACKSELMASCHINE

TYPE	MODEL											
	Flipper C	Flipper M	Flipper S									
80												
106												
106 H												
106 V												
132												
132 H												
132 V												
158												
158 H												
158 V												
186												
186 H												
186 V												
214												
214 H												
214 V												

Matr. n° : _____ Caprese Michelangelo li : _____


Via Caroni di Sotto, 19 - 52033 CAPRESE MICHELANGELO (AR)
Tel. 0575 791059 (RA) - Fax 0575 791210
PORTAL SITE: <http://www.del-morino.it>
E-mail: info@del-morino.it - export@del-morino.it
Cap. Soc. 400.000 I.V. N. MECCANOGRAFICO AR 005024
N° ISCRIZIONE RI - Cod. Fisc. e P. IVA: 01041010511
R.I. ARF770 N° REA 81362



Farm & Garden Equipment

DelMorino

Custode del Fascicolo Tecnico: **Dott. A. Del Morino**, Via Caroni di Sotto 19, 52033 Caprese Michelangelo Arezzo Italy.
Keeper of the technical folder: **Dott. A. Del Morino**, Via Caroni di Sotto 19, 52033 Caprese Michelangelo Arezzo Italy.
Dépositaire du dossier technique : **Dott. A. Del Morino**, Via Caroni di Sotto 19, 52033 Caprese Michelangelo Arezzo Italy.
Verwalter der technischen Unterlagen : **Dott. A. Del Morino**, Via Caroni di Sotto 19, 52033 Caprese Michelangelo Arezzo Italy.