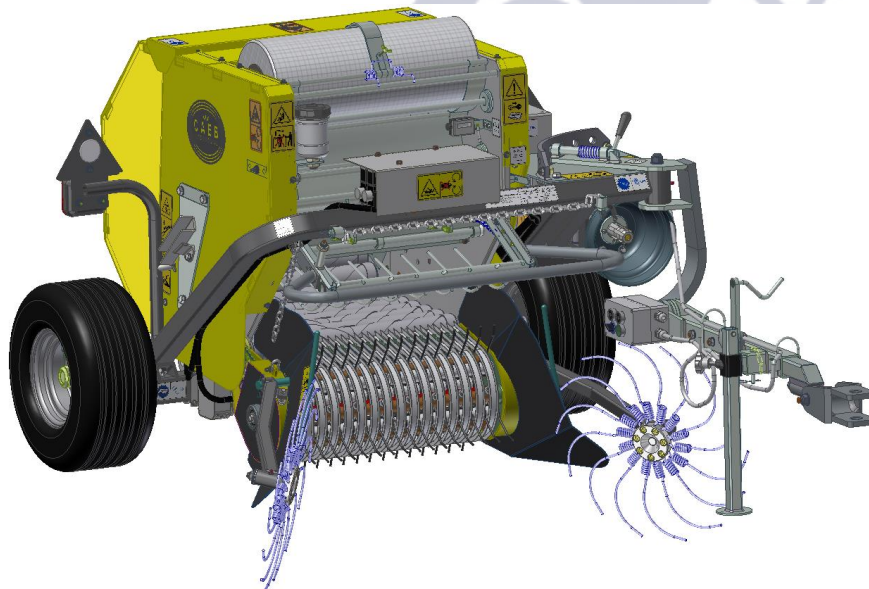




MOUNTAINPRESS 550TPL

USA custom version



After-delivery assembly instructions

Apply to:

MP 550TPL custom USA



INSTRUCTIONS

Aim

Assembly the machine after delivery in a compact case

Tools required

- N.1 offset hexagon key wrench metric size 5 mm
- N.2 open end wrench metric size 10 mm
- N.2 open end wrench metric size 22 mm
- N.1 plier


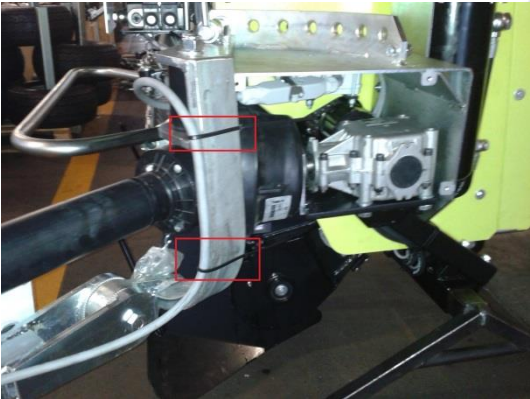
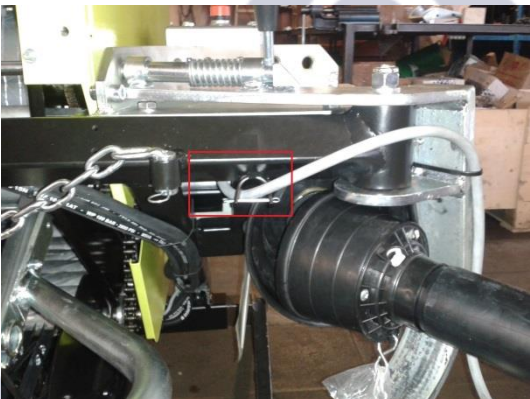

Warning

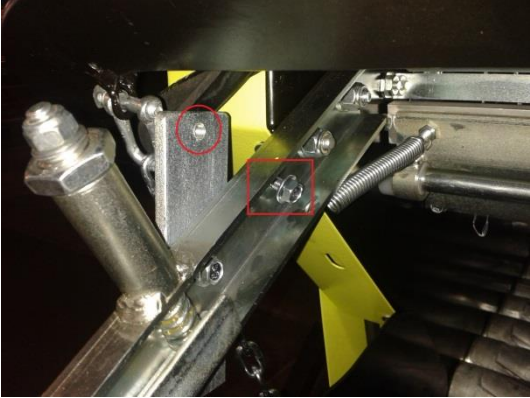
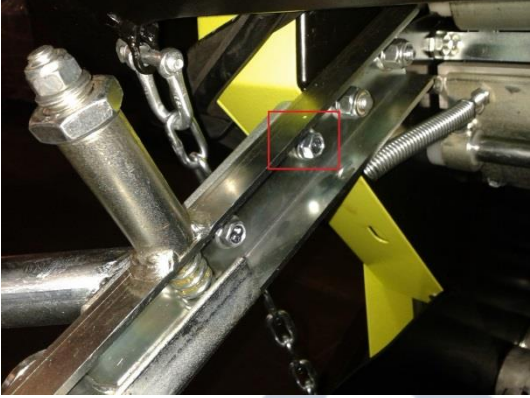


Read carefully the instructions below

Procedure

1		Couple the drawbar to its supporting element as shown in picture. Fasten the nut well.
2		Remove the side panel shown in picture. The control box connector has to be plugged in here.

<p>3</p>		<p>Take the electric plug connected to the control box and insert it through the two loops shown in picture.</p>
<p>4</p>		<p>The cable has to pass through the two cable ties shown in the picture.</p>
<p>5</p>		<p>Place the cable in the C-shaped element and lock in position by means of the split pin provided. Ply one end of the split pin in order to secure the cable position.</p>
<p>6</p>		<p>Plug in the two electric connectors.</p>
<p>7</p>	<p>See OP 2</p>	<p>Fasten the cable ties and place the side panel back in position.</p>

<p>8</p>		<p>Remove the screw and nut shown in the picture (and the one on the opposite side) and align the mounting hole of the safety bar.</p>
<p>9</p>		<p>Fix the safety bar by placing the removed screws and nuts.</p>
<p>10</p>	<p>See user manual §6.1.1</p>	<p>Set the wheels in the standard position.</p>
<p>11</p>	<p>See user manual §6.4</p>	<p>Place the net roll in its compartment.</p>