


# INSTALLATION GUIDE

---




## TS53, TM67, and TL75 Drum Mower Lift Kit

- Safely lift or place the mower in a position where you can access the bottom skid plate and prepare for removal and installation.
- Inspect the factory skid plate for any excess damage that may impede safe installation and operation.
- Remove the 6x 12mm bolts located on the bottom of each skid plate. The skid plate is heavy, so be careful and have preventative measures in place for the supporting of the skid plate as it is being removed and separated from the drum unit.
- Once the factory skid plate has been removed, place the new longer bolts in through the bottom of the new skid plate (Fig.1) and use tape to hold them in place (Fig.2). This will make the installation hassle free in the next steps. Then place the skid plate on the ground with the bolt threads facing up.

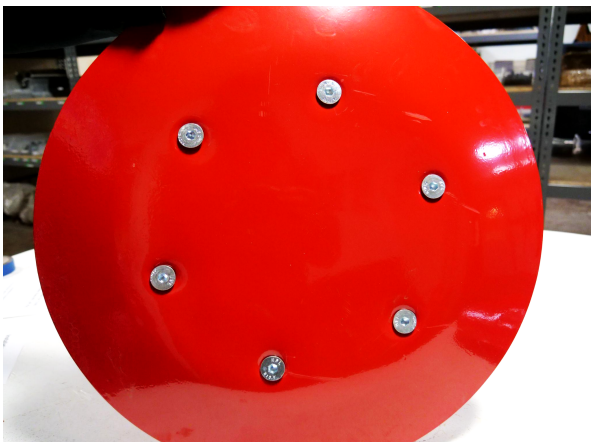

(Fig.1)

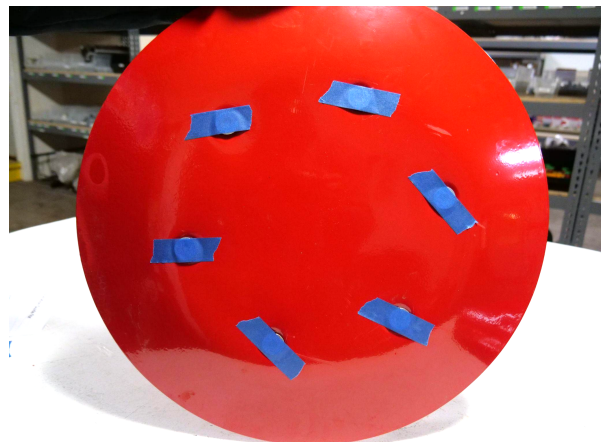

(Fig.2)


# INSTALLATION GUIDE

---

- Place the provided shims around the bolts so they rest against the top of the new skid plate (Fig.4 & 5).



(Fig.4)

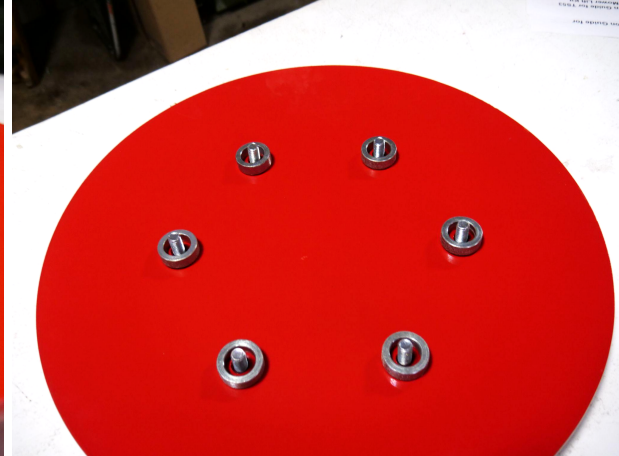

(Fig.5)

- Apply the provided medium strength thread locker to the threads on each bolt (Fig.6).



(Fig.6)

- Now line up the holes with the bolts and place the factory/old skid plate on top of the shims, where the bolts go through the factory holes and the old plate will be resting on top of the shims.

# INSTALLATION GUIDE

---

- **Pickup the assembly and line up the bolts to the holes on the drum unit, take off the tape holding the bolts in place one at a time and install bolts. This step is best done with a helper to help with the heavy plates.**
- **Place the mower back on the ground and the installation of the lift kit has been successfully completed.**